# IMPORTANT SAFETY RULES

Read, understand, and follow all instructions carefully before installing and using this product.

# Krystal Clear™ Model 635T Filter Pump



Don't forget to try these other fine Intex products: pools, pool accessories, inflatable pools and in-home toys, airbeds and boats available at fine retailers or visit our website.



### **IMPORTANT!** DO NOT RETURN PRODUCT TO STORE

To purchase parts and accessories or to obtain non-technical assistance, Visit www.intexcorp.com

For technical assistance and missing parts call us toll-free (for U.S. and Canadian Residents):

1-800-234-6839

Monday through Friday, 8:30am to 5:00pm Pacific Time

107-\*\*\*-R1-1211

107

Warnings	3
Parts List & Reference	4-6
Setup Instructions	7-9
Operating Instructions	10
Operating Time Table	11
Maintenance	12-13
Pool Care and Chemicals	13
Long Term Storage	13
Troubleshooting Guide	14
Common Pool Problems	15
General Aquatic Safety	16
Limited Warranty	17
Intex Service Center Locations	18

# IMPORTANT SAFETY RULES

# READ AND FOLLOW ALL INSTRUCTIONS


- To reduce the risk of injury, do not permit children to use this product. Always supervise children and those with disabilities.
- Children must stay away from this product and electrical cord(s).
- Assembly and disassembly by adults only.
- Risk of electric shock. Connect only to a grounding type receptacle, this product is provided with a ground-fault circuit interrupter. If replacement of the plug or cord is needed, use only identical replacement parts.
- Always unplug this product from the electrical outlet before removing, cleaning, servicing or making any adjustment to the product.
- The unit is provided with a ground-fault circuit interrupter (GFCI). To test the GFCI, push the test button. The GFCI should interrupt power. Push the reset button, power should be restored. If the GFCI fails to operate in this manner. The GFCI is defective. If the GFCI interrupts power to the pump without the test button being pushed, a ground current is flowing, indicating the possibility of an electric shock. Do not use this pump. Disconnect the pump and have the problem corrected by a qualified service representative before using.
- Do not bury the electrical cord. Locate the cord where it will not be damaged by lawn mowers, hedge trimmers and other equipment.
- To reduce the risk of electric shock, replace damaged cord immediately. Use a qualified electrician to replace the cord.
- To reduce the risk of electric shock, do not use extension cords, timers, plug adaptors or converter plugs to connect unit to electric supply; provide a properly located outlet.
- Do not attempt to plug in or unplug this product while standing in water or when your hands are wet.
- Do not use an appliance leakage current interrupter (ALCI) in place of a GFCI since the ALCI will not protect people.
- Position this product away from the pool, so as to prevent children from climbing on it and accessing the pool.
- Do not operate this product when the pool is occupied.
- This product is intended to be used only for the purposes described in the manual!

#### FAILURE TO FOLLOW THESE WARNINGS MAY RESULT IN PROPERTY DAMAGE, ELECTRIC SHOCK, ENTANGLEMENT OR OTHER SERIOUS INJURY OR DEATH.

# **A** CAUTION

This product is for use with storable pools only. Do not use with permanently-installed pools. A storable pool is constructed so that it is capable of being readily disassembled for storage and reassembled to its original integrity. A permanently-installed pool is constructed in or on the ground or in a building such that it cannot be readily disassembled for storage.


These product warnings, instructions and safety rules provided with the product represent some common risks of water recreation devices and do not cover all instances of risk and danger. Please use common sense and good judgement when enjoying any water activity.

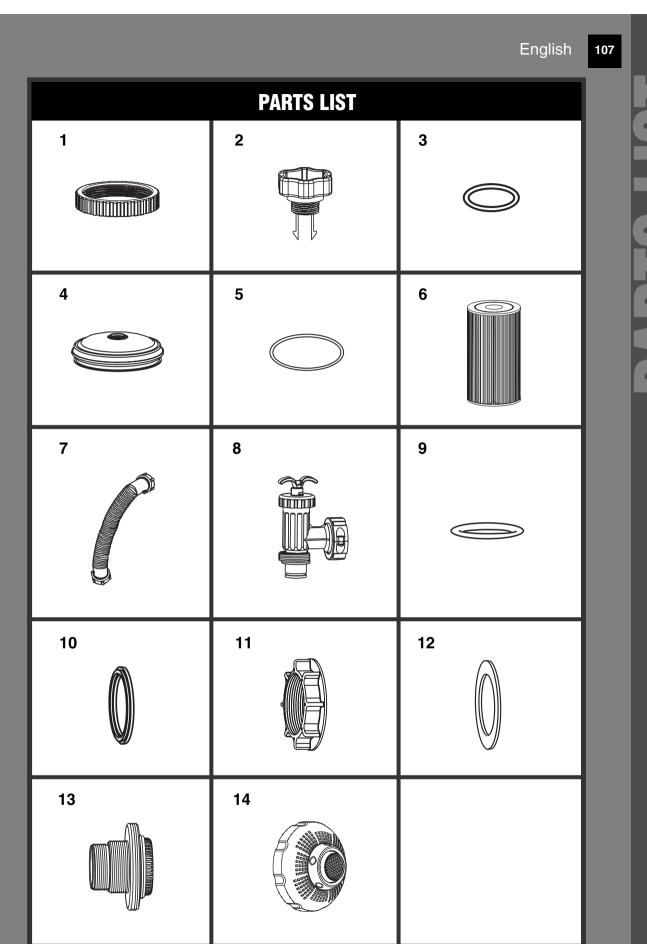

NOTE: Drawings for illustration purpose only. Actual product may vary. Not to scale.

### PARTS REFERENCE

Before assembling your product, please take a few minutes to check the contents and become familiar with all the parts.

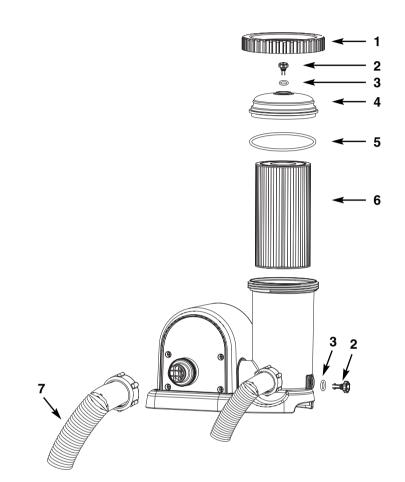


**NOTE:** Drawings for illustration purpose only. Actual product may vary. Not to scale.


REF. NO.	DESCRIPTION	QTY.	SPARE PART NO.
1	THREADED FILTER HOUSING COLLAR	1	10749
2	AIR RELEASE VALVE/SEDIMENT RELEASE VALVE	2	10460
3	VALVE O-RING	2	10264
4	FILTER HOUSING COVER	1	10750
5	FILTER HOUSING O-RING	1	10325
6	FILTER CARTRIDGE (59900)	1	
7	PUMP HOSE WITH NUTS	2	10493

When ordering parts, be sure to quote the model number and part numbers.

### **PARTS REFERENCE (continued)**

Before assembling your product, please take a few minutes to check the contents and become familiar with all the parts.

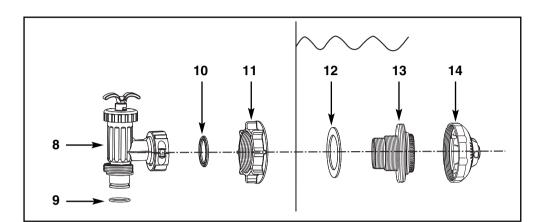

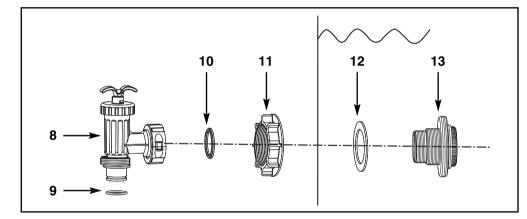

**NOTE:** Drawings for illustration purpose only. Actual product may vary. Not to scale.


REF. NO.	DESCRIPTION	QTY.	SPARE PART NO.
8	PLUNGER VALVE (HOSE O-RING & STEP WASHER INCLUDED)	2	10747
9	HOSE O-RING		10262
10	STEP WASHER		10745
11	STRAINER NUT	2	10256
12	FLAT STRAINER RUBBER WASHER	2	10255
13	THREADED STRAINER CONNECTOR	2	11235
14	ADJUSTABLE POOL INLET NOZZLE	1	11074


When ordering parts, be sure to quote the model number and part numbers.


### **POOL OUTLET - STRAINER & PLUNGER VALVE SETUP**


The strainer grid prevents large objects from jamming and/or damaging the filter pump. The plunger valve assembly prevents water from flowing into the filter pump while the filter cartridge is being placed or cleaned. If your pool has inflatable top ring, install the strainer, nozzle and plunger valve before inflating the pool liner top ring. The parts numbers here onward, refer to the parts depicted in the Parts List section of this manual. To install, do the following:


- In a counter-clockwise motion unscrew plunger valve union from the threaded strainer connector (13) (see drawing 1). Be careful not to lose the step rubber washer (10). Place the plunger valve on the ground in a safe place.
- In a counter-clockwise motion unscrew the strainer nut (11) from the threaded connector (13). Leave the flat washer (12) on the connector (13).
- Install the strainer and plunger valve at the lower position of pool outlet (marked "+"). From the inside of the pool liner insert the connector (13) into one of the pre-cut holes with the washer remaining on the connector to be placed against the inside of the liner wall.
- Before assembly, lubricate the threads with a petroleum jelly. Then, with the flat side of the strainer nut (11) facing the outside wall of the liner in a clockwise motion screw the strainer nut (11) back onto the threaded connector (13) (see drawing 2).
- 5. Finger tighten the strainer nut (11) onto the threaded connector (13).
- 6. Grasp the plunger valve assembly. Make sure the step washer (10) is in place.
- 7. In a clockwise motion screw the plunger valve union back onto the threaded connector (13) (see drawing 3).
- Examine the plunger valve to see if the handle is pushed fully down to the "0/1" position. If not, grasp the handle at the top and push down, turning the handle in a clockwise direction until the plastic protruding notch anchors in the "0/1" position. This will prevent water from flowing out during filling of the pool (see drawings 4.1 & 4.2).

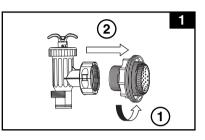

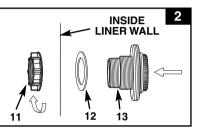

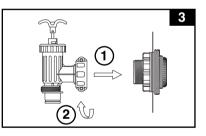


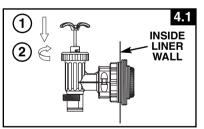


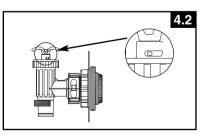



#### **POOL INLET - NOZZLE & PLUNGER VALVE SETUP**


- In a counter-clockwise motion unscrew plunger valve union from the threaded strainer connector (13) (see drawing 5). Be careful not to lose the step rubber washer (10). Place the plunger valve on the ground in a safe place.
- In a counter-clockwise motion unscrew the strainer nut (11) from the threaded connector (13). Leave the flat washer (12) on the connector (13).
- **3.** Install the nozzle and plunger valve at the upper position of pool inlet. From the inside of the pool liner insert the connector **(13)** into one of the pre-cut holes with the washer remaining on the connector to be placed against the inside of the liner wall.
- Before assembly, lubricate the threads with a petroleum jelly. Then, with the flat side of the strainer nut (11) facing the outside wall of the liner in a clockwise motion screw the strainer nut (11) back onto the threaded connector (13) (see drawing 6).
- 5. Finger tighten the adjustable pool inlet nozzle (14) and the strainer nut (11) onto the threaded connector (13).
- 6. Grasp the plunger valve assembly. Make sure the step washer (10) is in place.
- In a clockwise motion screw the plunger valve union back onto the threaded connector (13) (see drawing 7).
- Examine the plunger valve to see if the handle is pushed fully down to the "0/1" position. If not, then grasp the handle at the top and push down turning the handle in a clockwise direction until the plastic protruding notch anchors in the "0/1" position. This will prevent water from flowing out during filling of the pool (see drawings 8.1 & 8.2).
- 9. Adjust the direction of the nozzle head pointing away from the pool outlet for a better circulation result (see drawing 9).
- **10.** The pool liner is now ready to be filled with water. Consult the above-ground-pool owner's manual for the filling instructions.

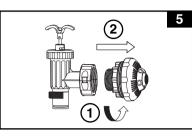


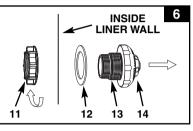

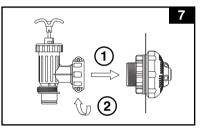

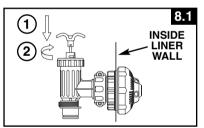

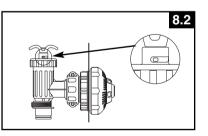

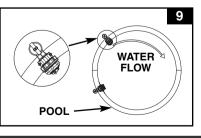

#### FILTER PUMP HOSE CONNECTION SETUP


- 1. Remove the Krystal Clear<sup>™</sup> filter pump and hoses from the packaging.
- 2. Place the filter pump in such a manner, that you can easily assemble the hose (7) connections to the plunger valve.

Note: Some regional regulations may require the filter pump to be mounted on a stationary platform. There are two mounting holes located in the pump base for this reason. Consult your local authorities for filter-pump mounting requirements.

- 3. Grasp the two pump hoses (7) and connect the hose nuts to the filter pump.
- 4. In a counter-clockwise motion unscrew the threaded filter housing collar (1) from the filter housing. Place it in a safe place.
- The filter pump is an airtight system. Turn the top air release valve (2) once or twice in a counter-clockwise motion.
   DO NOT remove the air release valve from the top cover, as water will expel with force if the motor is turned on. This may cause injury.
- Grasp and remove the filter housing cover (4). Check to see if a cartridge is inside the housing. If yes, replace the cover, finger tighten the housing collar (1) back onto the filter housing.
- 7. Gently finger tighten the sediment release valve located at the bottom of the housing to be sure that water does not leak out.
- **8.** When the pool is filled connect the hose from the bottom of the filter housing to the highest strainer assembly. You will find the hose connection at the bottom of the plunger valve assembly. Use the hose nut to attach the hose.
- **9.** Connect the second hose which is fixed to the middle of the motor housing to the remaining liner connection.

### WARNING

Position this product away from the pool, so as to prevent children from climbing on it and accessing the pool.

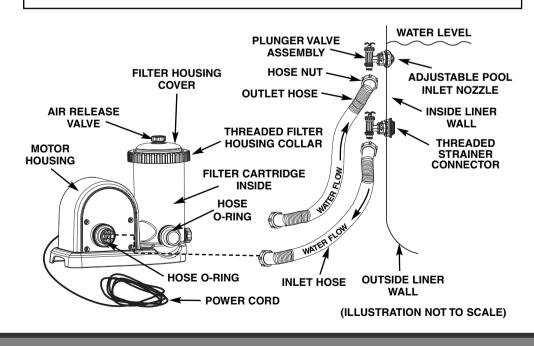

### **OPERATING INSTRUCTIONS**

- 1. Make sure the filter pump is switched off. The switch is located on the motor housing.
- 2. Connect the power cord to a GFCI protected electrical outlet.

### WARNING

Risk of electric shock. Connect this product only to a grounding type receptacle protected by a ground-fault circuit interrupter (GFCI). Contact a qualified electrician if you cannot verify that the receptacle is protected by a GFCI.

### **IMPORTANT**

To prevent air lock, open the lower plunger valve (connected inlet hose) first and then the upper plunger valve (connected outlet hose). Open the air release valve, wait until water starts to flow out of the air release valve, close air release valve.

- **3.** Grasp a plunger valve handle. Turn the handle counter-clockwise, pull up until it stops, and then turn it clockwise until the metal protruding notch anchors in the "0/1" position. Repeat for the second plunger valve. This opens the valves, allowing water to flow into the filter pump.
- 4. With water flowing into filter pump, the water pressure will allow the air trapped inside to escape from the air release valve (2). When all the air has escaped water will flow out of the valve (2). When this occurs gently finger tighten the valve (2) in a clockwise direction.


#### 5. To operate the filter pump on "TIMER" mode:

- A. Set the timer dial to the desired operating hours. See operation time table. See Fig. 10
- B. Turn on the pump by pressing the switch to "⊕" position, the filter pump is now filtering the water and will stop after the operating hours are completed. The built-in timer will now operate for the number of hours selected at the same time each day.

#### C. Operating hours can be re-adjusted if necessary. Follow step A – B.

#### To operate the filter pump manually (without the "TIMER" mode):

- A. Turn on the pump by pressing the switch to "-" position, the filter pump is now filtering the water.
- B. To turn off the pump, press the switch to "O" position.

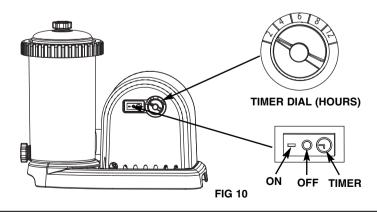

#### **OPERATING TIME TABLE**

This table shows the required operating time for average use of the filter pump with AGP's. The filter pump running time should be 1 hour longer than the required operating time of the Saltwater System.

Pool Size		Water Capacity (Calculated at 90% for Frame Pool and 80% for Easy Set & Oval Pool)		100% Water Capacity		Recommend operating hours per day
			(Liters)	(M <sup>3</sup> )	(Gals)	(Hours)
INTEX ABOVE G	ROUND POOLS (AGP's)					
	12' x 30" (366cm x 76cm)	1485	5621	7.0	1856	2
	12' x 36" (366cm x 91cm)	1779	6734	8.4	2223	2
	15' x 33" (457cm x 84cm)	2587	9792	12.2	3233	4
	15' x 36" (457cm x 91cm)	2822	10681	13.4	3527	4
@	15' x 42" (457cm x 107cm)	3284	12430	15.5	4105	4
EASY SET <sup>®</sup> POOL	15' x 48" (457cm x 122cm)	3736	14141	17.7	4671	4
FOOL	16' x 42" (488cm x 107cm)	3754	14209	17.8	4692	4
	16' x 48" (488cm x 122cm)	4273	16173	20.2	5342	4
	18' x 42" (549cm x 107cm)	4786	18115	22.6	5983	4
	18' x 48" (549cm x 122cm)	5455	20647	25.8	6819	6
	18' x 52" (549cm x 132cm)	5894	22309	27.9	7367	6
	12' x 30" (366cm x 76cm)	1718	6503	7.2	1909	2
	12' x 36" (366cm x 91cm)	2086	7896	8.8	2318	2
	14' X 42" (427cm X 107cm)	3357	12706	14.1	3730	4
	15' x 36" (457cm x 91cm)	3282	12422	13.8	3647	4
CIRCULAR	15' x 42" (457cm x 107cm)	3861	14614	16.2	4290	4
METAL FRAME POOL	15' x 48" (457cm x 122cm)	4440	16805	18.7	4934	4
	16' x 48" (488cm x 122cm)	5061	19156	21.3	5623	4
	16' x 52" (488cm x 132cm)	5501	20821	23.1	6112	6
	18' x 48" (549cm x 122cm)	6423	24311	27.0	7136	6
	18' x 52" (549cm x 132cm)	6981	26423	29.4	7757	6
ULTRA FRAME	16' x 48" (488cm x 122cm)	5061	19156	21.3	5623	4
POOL	18' x 52" (549cm x 132cm)	6981	26423	29.4	7757	6
SEQUOIA SPIRIT®	16'8" x 49" (508cm x 124cm)	5061	19156	21.3	5623	4
POOL SET	18'8" x 53" (569cm x 135cm)	6981	26423	29.4	7757	6
	18' x 10' x 42" (549cm x 305cm x 107cm)	2885	10920	13.7	3607	4
	20' x 12' x 48" (610cm x 366cm x 122cm)	4393	16628	20.8	5491	4
	24' x 12' x 48" (732cm x 366cm x 122cm)	5407	20465	25.6	6758	6
POOL	28' x 12' x 48" (853cm x 366cm x 122cm)	6420	24300	30.4	8025	6
	28' x 12' x 52" (853cm x 366cm x 132cm)	6925	26211	32.8	8657	6
	18' x 9' x 52" (549cm x 274cm x 132cm)	4545	17203	19.1	5050	4
RECT. ULTRA	24' x 12' x 52" (732cm x 366cm x 132cm)	8080	30583	34.0	8978	6
FRAME POOL	32' x 16' x 52" (975cm x 488cm x 132cm)	14364	54368	60.4	15960	12
	86-5/8" x 59" x 23-5/8" (220cm x 150cm x 60cm)	439	1662	1.8	488	2
SMALL	102-1/2" x 63" x 25-5/8" (260cm x 160cm x 65cm)	603	2282	2.5	670	2
RECTANGULAR FRAME POOL	118" x 78-3/4" x 29-1/2" (300cm x 200cm x 75cm)	1013	3834	4.3	1125	2
	177-1/4" x 86-5/8" x 33" (450cm x 220cm x 84cm)	1883	7127	7.9	2092	2
L				-		. –

### **CLEANING OR REPLACING FILTER CARTRIDGES**

#### It is recommended that the filter cartridge be replaced at least every 2 weeks.

- 1. Make sure the filter pump is turned off, then disconnect the power cord from the electrical outlet.
- 2. Grasp a plunger valve handle. Turn the handle counter-clockwise, push down until it stops and then turn it clockwise until the plastic protruding notch anchors in the "0/1" position. Repeat for the second plunger valve. This prevents the water from flowing out of the pool.
- **3.** Gently turn the top air release valve once or twice in a counter-clockwise direction. The housing cover can now be easily removed.
- **4.** In a counter-clockwise direction remove the filter housing collar **(1)**. Place it in a safe location.
- 5. Remove the housing cover (4).
- 6. Now remove the used filter cartridge.
- 7. Examine the inside of the filter housing.
- 8. If dirt or sediment is located on the bottom of the housing then:
  - **A.** In a counter-clockwise motion gently unscrew and remove the sediment valve (2) located at the bottom of the housing. Place it in a safe place.
  - **B.** With a bucket of water or a garden hose pour water into the housing flushing out the sediment.
  - **C.** Screw back the sediment valve (2) in a gentle clockwise motion. Do not over-tighten.
- 9. Place a new cartridge filter in the housing.
- **10.** Return the housing cover **(4)** to its position and in a clockwise direction rescrew the housing collar **(1)** onto the filter housing.
- **11.** Turn both plunger valve handles in a counter-clockwise direction, pull up until they stop, and then turn them clockwise until the metal protruding notch anchors in the "0/1" position.
- **12**. When the trapped air has escaped through the air release valve gently retighten the valve **(2)** in a clockwise direction.
- 13. Reconnect the power cord.
- **14**. Turn on the pump.

#### **POOL CARE & CHEMICALS**

- All pools require care to keep the water clear and hygienically clean. With proper chemical control, your filter will help attain this objective. Consult your pool supply dealer for instructions regarding the proper use of chlorine, algaecide and other chemical agents required for sparkling clear water.
- Keep pool chemicals away from children.
- Do not replenish chemicals in pool while pool is occupied. Skin or eye irritations could occur.
- Daily pH checking and chemical treatment of the water is very important and cannot be overemphasized. Chlorine, algaecide and maintenance of proper pH levels are required when filling the pool as well as during the season. Consult your local swimming pool supply store for instructions.
- swimming pool supply store for instructions.
  The season's first filling of the pool may have brackish water requiring extra water additives and extra filter changes. Do not allow swimming in pool until the pH level is balanced. Consult your local swimming pool supply store for instructions.
- Keep spare filter cartridges on hand. Replace cartridges every two weeks.
- Chlorinated water may damage lawns, gardens or shrubbery as children play in the pool and splash water outside the pool. Lawn areas underneath the pool liner will be destroyed. Note that some types of grass may grow through the liner.
- Filter run time depends on pool size, weather and usage level. Experiment with various run times so as to produce clean clear water.

### CAUTION

Concentrated chlorine solutions may damage the pool liner. Always follow the chemical manufacturer's directions, and the health and hazard warnings.

### LONG TERM STORAGE

- 1. Before emptying your pool for long term storage, or relocation, be sure the water is directed towards an acceptable drain water receptacle away from the house. Check local regulations for specific directions regarding disposal of swimming pool water.
- 2. Disconnect power cord from electrical outlet.
- **3**. Now, drain the pool.
- 4. When the pool is empty, disconnect all hoses from pump and plunger valves and remove the strainers from the pool wall.
- 5. Drain all water from the filter pump.
- 6. Leave filter pump pieces & hoses outside to thoroughly air dry.
- 7. Twist the plunger collar counter-clockwise removing the water flow control
- mechanism from the plunger housing.
  Coat the following O-rings and washers with petroleum jelly for long term storage:
  - Air release valve & sediment O-rings (3).
  - Filter housing cover O-ring (5).
  - Pump hose O-rings (9).
    Strainer valve assembly stop in
  - Strainer valve assembly step washers (10).
     Elet strainer rubber washers (12)
  - Flat strainer rubber washers (12).
- 9. Discard the used filter cartridge. Put aside 1 or 2 new cartridges for next season's use.
- **10.** It is best to place all dry pieces in the original packaging for storage or place them in an airtight plastic bag.
- Store the unit and accessories in a dry place. The storage's temperature should be controlled, between 32 degrees Fahrenheit (0 degrees Celsius) and 104 degrees Fahrenheit (40 degrees Celsius) storage location.

### IMPORTANT

It is best to store away your poolsystem in its original packaging.

### TROUBLESHOOTING GUIDE

TROUBLE	CAUSE	SOLUTION	
FILTER MOTOR FAILS TO START	<ul> <li>The motor is not plugged in.</li> <li>The fuse box needs checking.</li> <li>The GFCI circuit breaker is tripped.</li> <li>Motor too hot and overload protection shut motor off.</li> </ul>	<ul> <li>Filter cord must be plugged into a 3 wire outlet that is protected by a Class A Ground Fault Circuit Interrupter.</li> <li>Reset circuit breaker. If circuit breaker trips repeatedly, your electrical system may have a defect. Turn off circuit breaker and call an electrician to correct the problem.</li> <li>Let motor cool down.</li> </ul>	
FILTER DOESN'T CLEAN POOL			
FILTER DOESN'T PUMP WATER OR THE WATER FLOW IS VERY SLOW	<ul> <li>Clogged inlet or discharge.</li> <li>An air leak on the intake line.</li> <li>Scale or buildup on cartridge.</li> <li>Excessively dirty pool.</li> <li>Dirty filter cartridge.</li> <li>The nozzle and strainer connection are reversed.</li> </ul>	<ul> <li>Clear any obstructions in the intake hose by discharging it inside pool wall.</li> <li>Tighten hose nuts, check hoses for damage, check pool water level.</li> <li>Clean cartridge more often.</li> <li>Clean inside the plunger valve.</li> <li>Pull valve handle to full upright position.</li> <li>Install the nozzle at the upper position of the pool inlet, and the strainer at the lower position of the pool outlet.</li> </ul>	
PUMP DOESN'T WORK	<ul> <li>Low water level.</li> <li>Strainer screen plugged up.</li> <li>An air leak on the intake hose.</li> <li>Faulty motor or the impeller is jammed.</li> <li>An air lock inside the cartridge chamber.</li> </ul>	<ul> <li>Fill pool to correct water level.</li> <li>Clean strainer screens at pool inlet.</li> <li>Tighten hose nuts, check hose for damag</li> <li>Clear any sticks or leaves in the intake hose.</li> <li>Turn and pull valve handle to full upright position.</li> </ul>	
TOP COVER LEAKING	<ul><li>O-ring missing.</li><li>Cover is not tight.</li><li>Filter cartridge is dirty.</li></ul>	<ul> <li>Remove cover &amp; check for O-ring.</li> <li>Tighten cover (Manually).</li> <li>Replace or clean cartridge.</li> </ul>	
HOSE LEAKING	Hose nuts are not well-fitted.	<ul> <li>Tighten or reinstall hose nut.</li> </ul>	
AIR LOCK	<ul> <li>There's air trapped in the pump housing and inlet hose.</li> <li>The inlet and outlet hoses connection are reversed.</li> </ul>	<ul> <li>Open air release valve, wait until water starts to flow out of the air release valve, close air release valve.</li> <li>The lower position of pool outlet connects to filter pump water inlet. The upper position of pool inlet connects to filter pump water outlet.</li> </ul>	

# IMPORTANT

If you continue to experience difficulty, please contact our Consumer Service Department for assistance. See back cover for contact information.

TROUBLE	DESCRIPTION	CAUSE	SOLUTION
ALGAE	<ul> <li>Greenish water.</li> <li>Green or black spots on pool liner.</li> <li>Pool liner is slippery and/or has a bad odor.</li> </ul>	<ul> <li>Chlorine and pH levels need adjustment.</li> </ul>	<ul> <li>Super chlorinate with shock treatment. Correct pH to your pool store's recommended level.</li> <li>Vacuum pool bottom.</li> <li>Maintain proper chlorine level.</li> </ul>
COLORED WATER	• Water turns blue, brown, or black when first treated with chlorine.	• Copper, iron or maganese in water being oxidized by the added chlorine. This is common.	<ul> <li>Adjust pH level to the recommended level.</li> <li>Run filter until water is clear.</li> <li>Clean cartridge frequently.</li> </ul>
FLOATING MATTER IN WATER	<ul> <li>Water is cloudy or milky.</li> </ul>	<ul> <li>"Hard water" caused by a too high pH level.</li> <li>Chlorine content is low.</li> <li>Foreign matter in water.</li> </ul>	<ul> <li>Correct the pH level. Check with your pool dealer for advice.</li> <li>Adjust the chlorine level.</li> <li>Clean or replace your filter.</li> </ul>
CHRONIC LOW WATER LEVEL	<ul> <li>Level is lower than on previous day.</li> </ul>	<ul> <li>Rip or hole in pool liner or hoses.</li> <li>The drain valves are loose.</li> </ul>	<ul> <li>Repair with a patch kit.</li> <li>Finger tighten all caps.</li> </ul>
SEDIMENT ON POOL BOTTOM	• Dirt or sand on pool floor.	<ul> <li>Heavy use, getting in and out of pool.</li> </ul>	Use Intex pool vacuum to clean bottom of pool.
SURFACE DEBRIS	<ul> <li>Leaves, insects etc.</li> </ul>	Pool too close to trees.	Use Intex pool skimmer.

Operation is subject to the following two conditions: (1) this device may not cause interference, and (2) this device must accept any interference, including interference that may cause undesired operation of the device.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This equipment has been tested and found to comply with the limits for Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and the receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

### **GENERAL AQUATIC SAFETY**

Water recreation is both fun and therapeutic. However, it involves inherent risks of injury and death. To reduce your risk of injury, read and follow all product, package and package insert warnings and instructions. Remember, however, that product warnings, instructions and safety guidelines cover some common risks of water recreation, but do not cover all risks and dangers.

For additional safeguards, also familiarize yourself with the following general guidelines as well as guidelines provided by nationally recognized Safety Organizations:

- Demand constant supervision. A competent adult should be appointed as a "lifeguard" or water watcher, especially when children are in and around the pool.
- · Learn to swim.
- Take the time to learn CPR and first aid.
- Instruct anyone who is supervising pool users about potential pool hazards and about the use of protective devices such as locked doors, barriers, etc.
- Instruct all pool users, including children what to do in case of an emergency.
- Always use common sense and good judgement when enjoying any water activity.
- Supervise, supervise, supervise.

For additional information on safety, please visit

- The Association of Pool and Spa Professionals: The Sensible Way to Enjoy Your Aboveground/Onground Swimming Pool www.nspi.org
- American Academy of Pediatrics: Pool Safety for Children www.aap.org
- Red Cross www.redcross.org
- Safe Kids www.safekids.org
- Home Safety Council: Safety Guide www.homesafetycouncil.org
- Toy Industry Association: Toy Safety www.toy-tia.org

#### SAFETY IN YOUR POOL

Safe swimming depends on constant attention to the rules. The "NO DIVING" sign within this manual can be posted near your pool to help keep everyone alert to the danger. You may also wish to copy and laminate the sign for protection from the elements.

### LIMITED WARRANTY

Your Krystal Clear<sup>™</sup> Filter-Pump has been manufactured using the highest quality materials and workmanship. All Intex products have been inspected and found free of defects prior to leaving the factory. This Limited Warranty applies only to the Krystal Clear<sup>™</sup> Filter-Pump and accessories listed below.

The provisions of this Limited Warranty apply only to the original purchaser and is not transferable. This Limited Warranty is valid for the period noted below from the date of the initial retail purchase. Keep your original sales receipt with this manual, as proof of purchase will be required and must accompany warranty claims or the Limited Warranty is invalid.

Krystal Clear<sup>™</sup> Filter-Pump Warranty – 1 Year Hoses, Plunger Valves & Fittings Warranty – 180 days

If a manufacturing defect is found within the periods noted above, please contact the appropriate Intex Service Center listed in this manual. The Service Center will determine the validity of the claim. If the Service Center directs you to return the product, please carefully package the product and send with shipping and insurance prepaid to the Service Center. Upon receipt of the returned product, the Intex Service Center will inspect the item and determine the validity of the claim. If the provisions of this warranty cover the item, the item will be repaired or replaced at no charge.

Any and all disputes regarding the provisions of this Limited Warranty shall be brought before an informal dispute settlement board and unless and until the provisions of these paragraphs are carried forth, no civil action may be instituted. The methods and procedures of this settlement board shall be subject to the rules and regulations set forth by the Federal Trade Commission (F.T.C.). IMPLIED WARRANTIES ARE LIMITED TO THE TERMS OF THIS WARRANTY AND IN NO EVENT SHALL INTEX, THEIR AUTHORIZED AGENTS OR EMPLOYEES BE LIABLE TO THE BUYER OR ANY OTHER PARTY FOR DIRECT OR CONSEQUENTIAL DAMAGES OR LIABILITIES. Some states, or jurisdictions do not allow the exclusion or limitation of incidental or consequential damages, so the above limitation or exclusion may not apply to you.

This Limited Warranty does not apply if the products are subject to negligence, abnormal use or operation, accident, improper operation, improper voltage or current contrary to operating instructions, or to damage by circumstances beyond Intex's control, including but not limited to, ordinary wear and tear and damage caused by exposure to fire, flood, freezing, rain, or other external environmental forces. This Limited Warranty applies only to those parts and components sold by Intex. The Limited Warranty does not cover unauthorized alterations, repairs or disassembly by anyone other than Intex Service Center personnel.

DO NOT GO BACK TO THE PLACE OF PURCHASE FOR RETURN OR REPLACEMENT. IF YOU ARE MISSING PARTS OR NEED ASSISTANCE, PLEASE CALL US TOLL-FREE (FOR U.S. AND CANADIAN RESIDENTS): 1-800-234-6839 OR VISIT OUR WEBSITE: WWW.INTEXSTORE.COM.

Proof of Purchase must accompany all returns or the warranty claim will be invalid.

<b>COUNTRIES/REGIONS</b>	SERVICE CENTER LOCATIONS	
• UNITED STATES • CANADA	INTEX RECREATION CORP. 1665 Hughes Way Long Beach, CA 90801 Tel: 1-800-234-6839 Fax: 310-549-2900 Website: www.intexcorp.com (U.S./Canada only) Consumer Service Hours: 8:30 am to 5:00 pm Pacific Time, Mon. thru FRI. only.	
• MEXICO	KAY INTERNACIONAL, S.A. DE C.V. SAN JERONIMO # 550- INT.501 Y 502. COL. JARDINES DEL PEDREGAL. C.P. 01900 MÉXICO D.F. Tel: 01-800-347-4020 (Collect Call) Tel: 55-9172-8035 Fax: 55-9172-8047 E-mail: servicenter@kayinternacional.com Website: www.intexmexico.com.mx	
• PANAMA • PARAGUAY • ECUADOR • HONDURAS • EL SALVADOR • NICARAGUA	SUPRO MUNDIAL S.A./ PRODUCTOS SUPERIORES S.A. Boulevard Andrews, Albrook, Panama, Rep. of Panama Tel: 507-300-3800 Fax: 507-300-3813 E-mail: suproadmin@supropanama.com	
• COSTA RICA • DOMINICAN REPUBLIC • GUATEMALA • COLOMBIA • VENEZUELA	<b>CENTURY USA, LLC</b> 4731 W. Atlantic Ave., Suite B-3 Delray Beach, FL 33445, USA Tel: 561-495-0648 Fax: 561-495-4782 E-mail: sales@centuryusa.com	
• MIDDLE EAST REGION REGION	FIRST GROUP INTERNATIONAL AL MOOSA GROUP BUILDING, 1ST FLOOR, OFFICE 102 & 103, UMM HURAIR ROAD, KARAMA, DUBAI, UAE TEL: 00971-4-800INTEX(46839) / +971-4-3373322 FAX: 00971-4-3375115 E-mail: intex@firstgroupinternational.com. Website: www.firstgroupinternational.com	
• ASIA	INTEX DEVELOPMENT CO. LTD. 9th Floor, Dah Sing Financial Centre 108 Gloucester Road, Wanchai, Hong Kong Tel: 852-28270000 Fax: 852-23118200 E-mail: xmservicesupport@intexcorp.com.cn Website: www.intexdevelopment.com	
For answers to most frequently asked questions, please visit WWW.intexcorp.com.		

Non U.S. Residents, please visit WWW.intexdevelopment.com.

### For Residents of the U.S. & Canada: INTEX RECREATION CORP. Attn: Consumer Service 1665 Hughes Way Long Beach, CA 90801 Phone: 1-800-234-6839 Fax: (310) 549-2900

Consumer Service Hours: 8:30 am to 5:00 pm Pacific time Monday thru Friday only Website: www.intexcorp.com

#### *For Residents outside of the U.S. and Canada: Please refer to the Service Center Locations*

©2011 Intex Marketing Ltd. - Intex Development Co. Ltd. -Intex Trading Ltd. - Intex Recreation Corp. All rights reserved/Tous droits réservés/Todos los derechos reservados/Alle Rechte vorbehalten. Printed in China/Imprimé en Chine/Impreso en China/Gedruckt in China.

®™ Trademarks used in some countries of the world under license from/®™ Marques utilisées dans certains pays sous licence de/Marcas registradas utilizadas en algunos países del mundo bajo licencia de/Warenzeichen verwendet in einigen Ländern der Welt in Lizenz von/Intex Marketing Ltd. to/a/a/an Intex Trading Ltd., Intex Development Co. Ltd., G.P.O Box 28829, Hong Kong & Intex Recreation Corp., P.O. Box 1440, Long Beach, CA 90801 • Distributed in the European Union by/Distribué dans l'Union Européenne par/Distribuido en la unión Europea por/Vertieb in der Europäischen Union durch/Intex Trading B.V., P.O. Box nr. 1075 – 4700 BB Roosendaal – The Netherlands

