


## How to measure your filter cartridge:

- A. Measure the outside diameter of the cartridge. (+/- 1/16 inches or +/- 1.6 mm)
- B. Measure the overall length of the cartridge (+/- 1/16 inches or +/- 1.6 mm) including the end caps. **Do not include any handles, strings, etc.**

*Note: A more accurate measurement is made by measuring through the center of the cartridge when possible.*

- C. If the top and/or bottom is open, measure the inside diameter of the opening (+/- 1/16 inches or +/- 1.6 mm). Match the cartridge end cap configuration to a corresponding one in the complete end cap gallery.
- D. Make note of the manufacturer (OEM) and model number of the filter the replacement cartridge will be installed in.
- E. Take note whether or not there is a center core in the center. Also count the number of pleats (+/- 1/16 inches or +/- 1.6 mm)

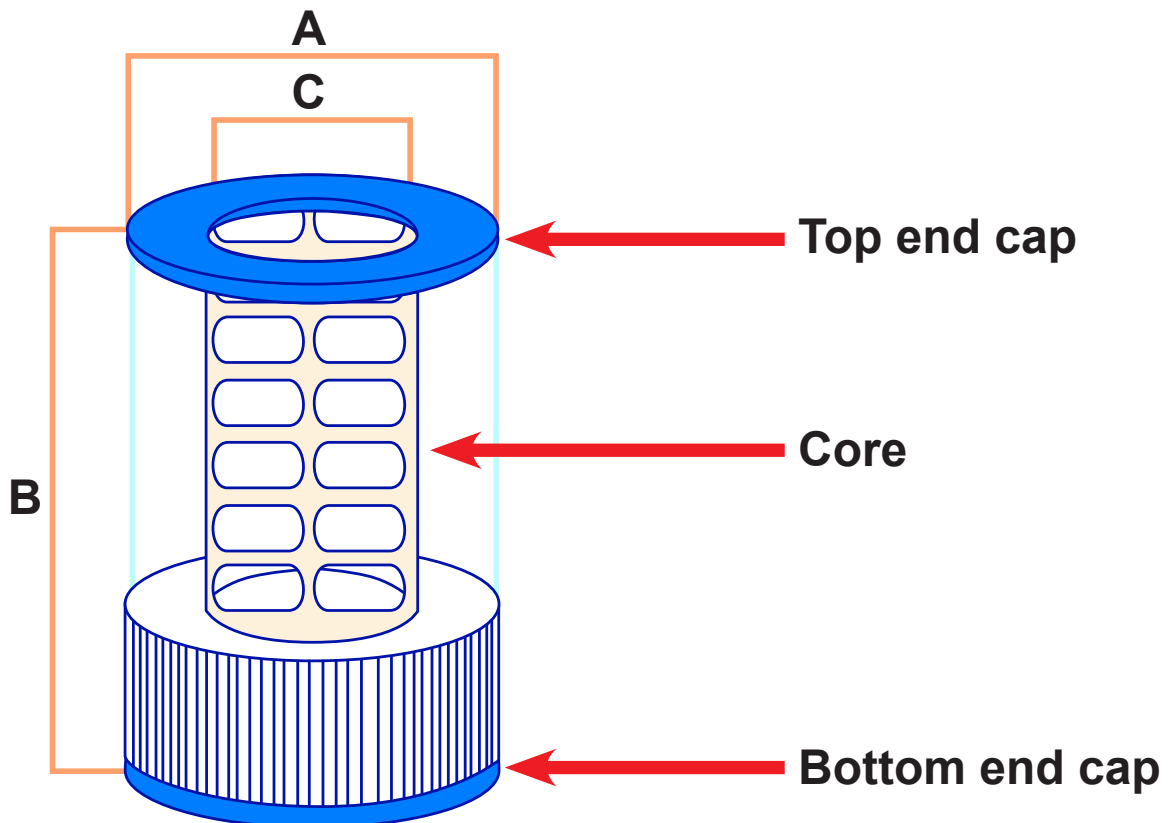

**Please note: Filter Cartridge Measurements may vary.  
Always allow a variance of: +/- 1/16 inches or +/- 1.6 mm)**