



ROBOTIC POOL CLEANER

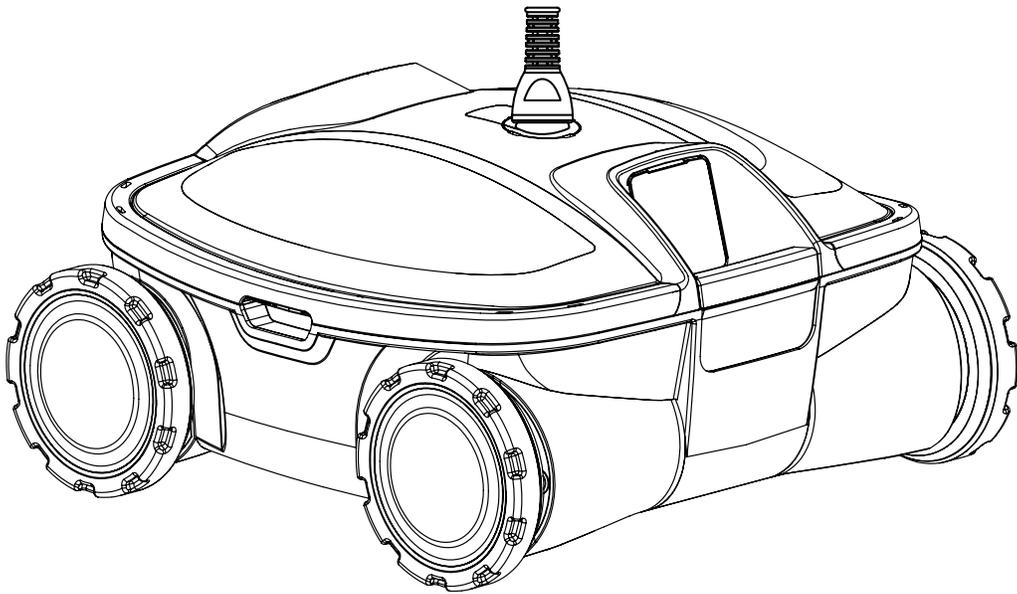


PLEASE READ CAREFULLY BEFORE
USING YOUR POOL CLEANER

**QUICK START
GUIDE**


QUICK START INSTRUCTIONS (Steps 1-6)

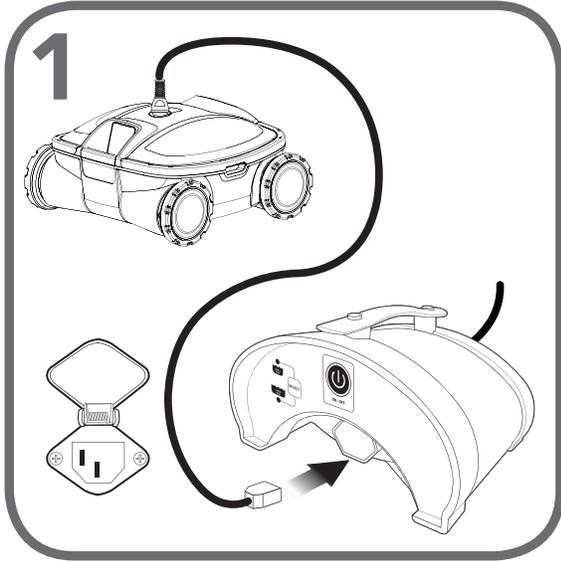


Straighten out the floating cable and plug the cleaner into the power supply. **DO NOT** plug the power supply in at this point.

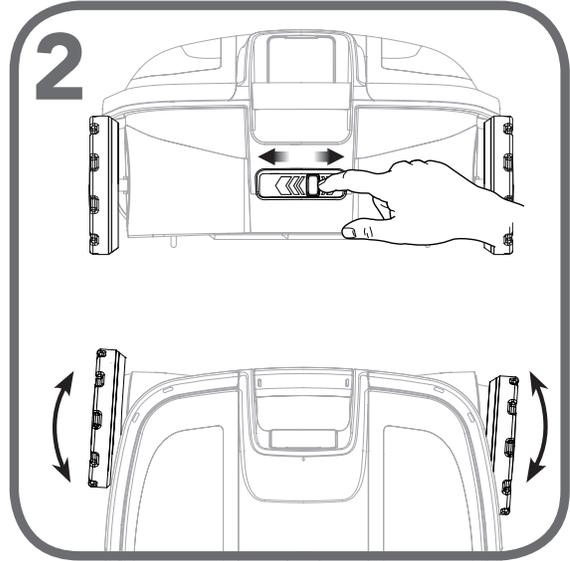


To adjust the wheels, use the 'slider' on the front. For more detailed information, please see Settings Manual.

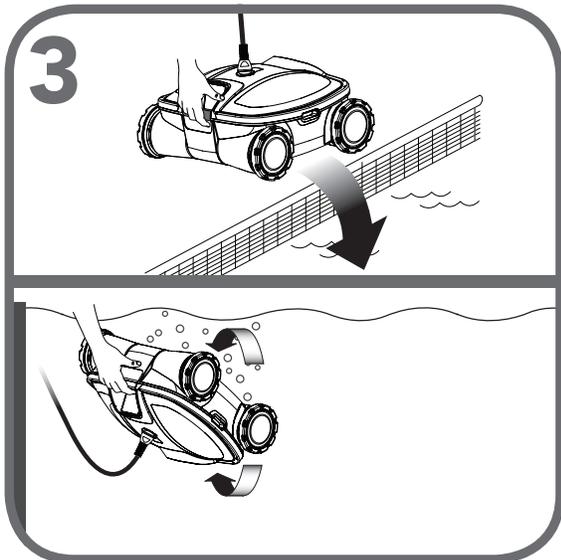


Place the cleaner in your pool using the front handle and turn upside down to remove any air bubbles.

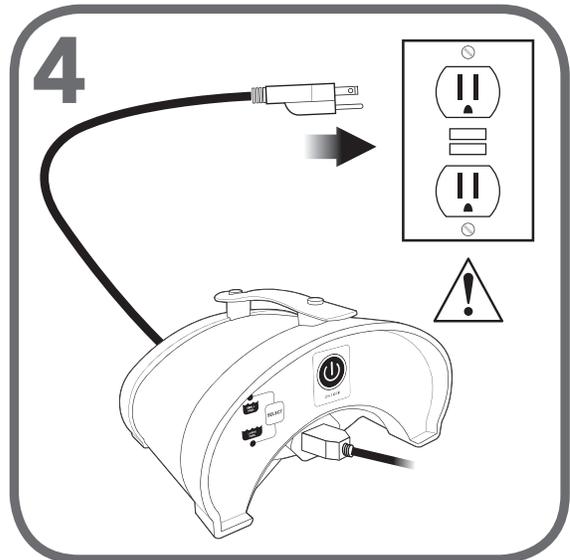

Plug the power supply into a GFCI outlet. (Ground Fault Circuit Interrupter)

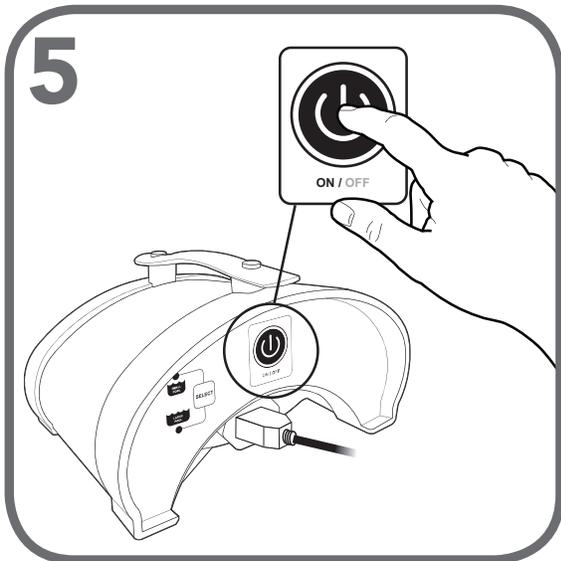


Turn power supply ON.

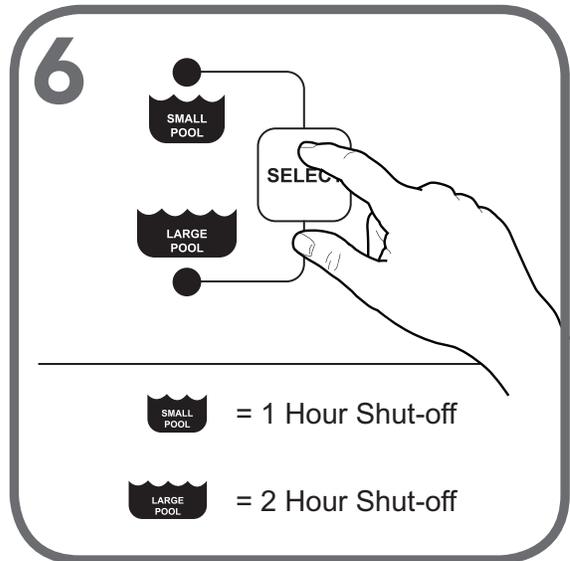


Set the timer setting and let the cleaner go!


ROBOT REMOVAL and FILTER BAG CLEANING INSTRUCTIONS (Steps 7-12)

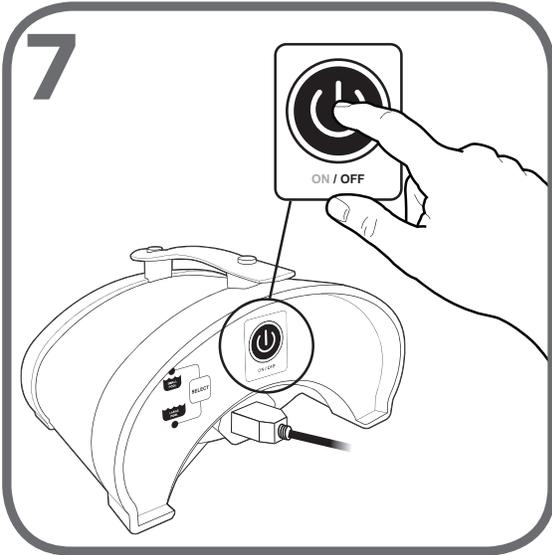


Turn power supply OFF.
Press and release the power button once

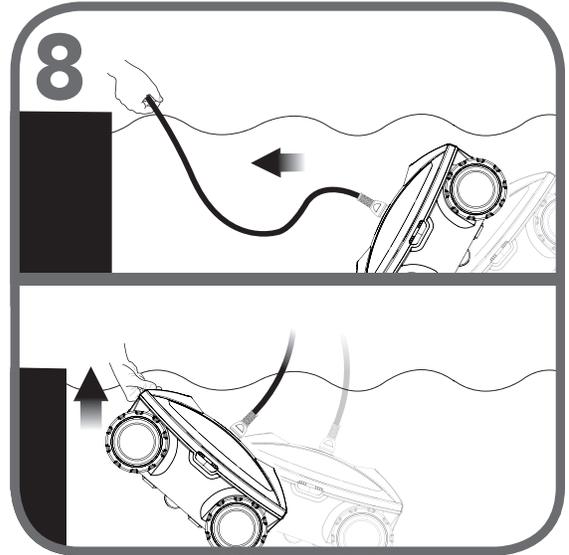

Gently pull cleaner to edge using the floating cable. Lift unit out using the handle (as shown in picture) and let the water drain.

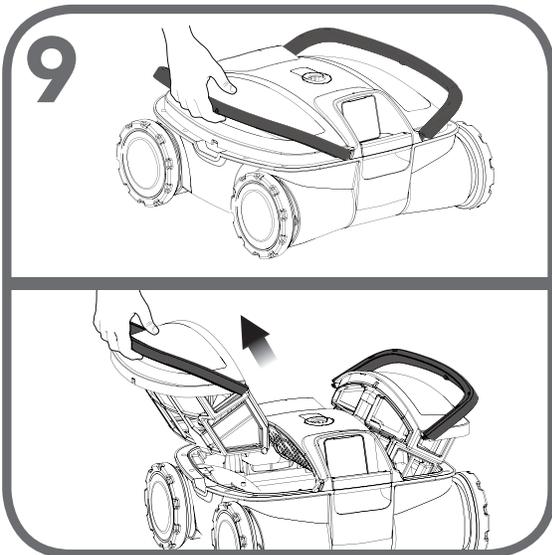


Grab the handle on the filter basket and gently pull upward to remove the baskets on each side

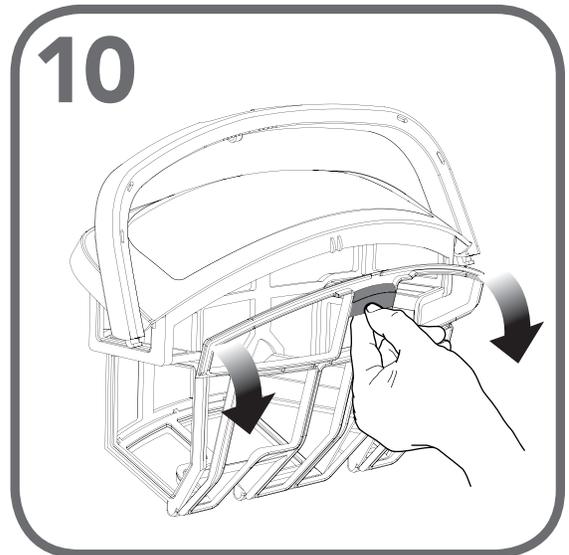

Open the basket by using the tab on the basket door.




Use a hose to clean out the debris from the basket.
Spray into the basket from the outside.

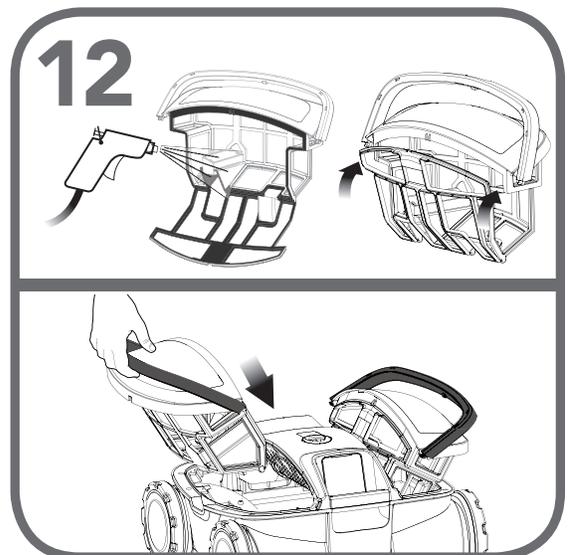

Make sure to clean the inside areas of the basket door.

CLEANING PATTERN

This is the anticipated cleaning pattern for your unit. Please be aware that different pool shapes will cause a slight deviation of this pattern. In general this is what should be expected.

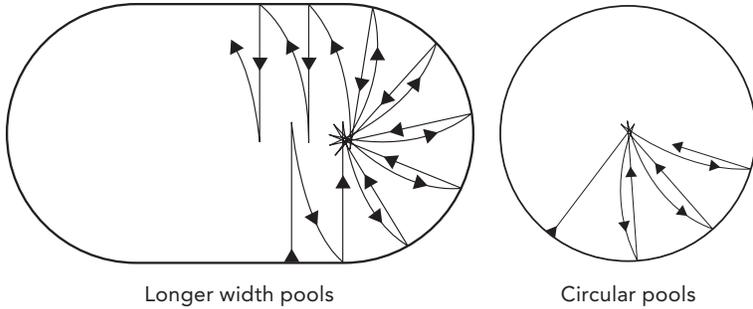

TROUBLESHOOTING

These are the most common questions you might have regarding your unit. For more detailed troubleshooting, see the Troubleshooting Guide included in the packaging.

My unit is not sucking up debris:

- Make sure the filter bag is clean
- Check to see that you've properly set-up the unit and power supply
- Check to see if the propellers are stuck

All LED lights are blinking on the power supply:

- Check to see if the unit is out of water
- Check to see if the propellers are stuck
- To restart, press the power button once. Cleaning program will resume from where it left off.

The Floating Cable gets tangled:

- Change the axle set-up (see Figure A below). Unit is most likely turning too sharply. Use the E-Z Swivel to straighten out the cable (see Figure B below)


Unit is stuck in the middle of the pool but the unit still pumps out water:

- Check to see that there is nothing obstructing the cleaner or that the cleaner is not stuck on any loose objects in the pool.

Figure A (bottom view):

By changing the axle set-up using the slider on the front of the cleaner, you can adjust how tight or wide the cleaner turns. This can also be used to help untangle the floating cable by forcing the unit to run a reverse pattern.

See the Detailed Instructions and Troubleshooting Guide (included in the box) for more detailed configurations.

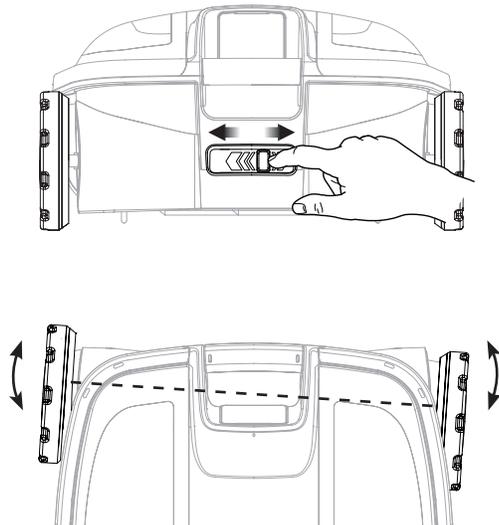

WARNINGS




WARNING: Do not turn the Power Supply on, unless the pool cleaner is in the water.

WARNING: Do not operate your machine while people swim in the pool.

WARNING: The Power Supply must be placed at least 12 feet / 4 meters from the pool's edge at all times! See diagram below.

WARNING: To prevent possible electric shock hazard this unit must be connected to an RCD (Residual Current Device) with a related residual operating current not exceeding 30mA.

WARNING: Before performing any troubleshooting maintenance procedures, your Cleaner should be disconnected from the Power Supply (transformer) and the Power Supply should be unplugged from the electrical outlet to prevent the possibility of personal injury or damage to your Cleaner!

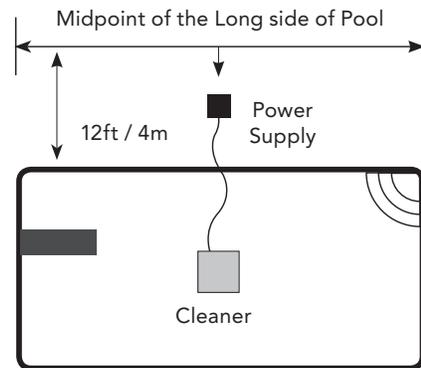

DO NOT RETURN CLEANER TO RETAILER!

**CALL CUSTOMER SERVICE AT
800-221-1750**

This guide provides basic troubleshooting. A more detailed troubleshooting guide is included separate from this guide.

Figure B:

If your cable gets tangled, use the EZ Swivel to straighten out the cable.

Using one hand, grab the larger grip and pull towards the power supply. Cable will automatically untangle itself. For more detailed instructions, see the Detailed Instructions and Troubleshooting Guide that is included in the box.

Please disconnect floating cable from power supply FIRST!

